


# SMD

Frequency Inverter: Full I/O  
with CANopen 0.37 kw... 22kW



Operating Instructions



**Lenze**

**Copyright © 2013 - 2005 Lenze AC Tech Corporation**

All rights reserved. No part of this manual may be reproduced or transmitted in any form without written permission from Lenze AC Tech Corporation. The information and technical data in this manual are subject to change without notice. Lenze AC Tech Corporation makes no warranty of any kind with respect to this material, including, but not limited to, the implied warranties of its merchantability and fitness for a given purpose. Lenze AC Tech Corporation assumes no responsibility for any errors that may appear in this manual.

All information given in this documentation has been carefully selected and tested for compliance with the hardware and software described. Nevertheless, discrepancies cannot be ruled out. We do not accept any responsibility nor liability for damages that may occur. Any necessary corrections will be implemented in subsequent editions.

This document printed in the United States



1	Safety Information .....	5
1.1	Pictographs used in these Instructions.....	6
2	Technical Data .....	8
2.1	Standards and Application Conditions.....	8
2.2	Ratings .....	9
3	Installation .....	10
3.1	Mechanical Installation .....	10
3.1.1	Dimensions and Mounting.....	10
3.2	Electrical Installation.....	11
3.2.1	Installation according to EMC Requirements .....	11
3.2.2	Fuses/Cable Cross-Sections.....	11
3.2.3	Connection Diagram .....	12
3.2.4	Control Terminals .....	13
4	Commissioning .....	14
4.1	Parameter Setting .....	14
4.2	Electronic Programming Module (EPM).....	14
4.3	Parameter Menu.....	15
4.4	CANopen Mapping Details .....	26
4.4.1	RPDO Mapping (h66 / h76).....	26
4.4.2	TPDO Mapping (h86 / h96) .....	29
4.5	Quick CAN Set-up.....	33
5	Troubleshooting and Fault Elimination .....	34



## About These Instructions

This documentation applies to the smd frequency inverter, and contains important technical data and describes installation, operation, and commissioning.

Please read the instructions before commissioning.

<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>
<b>Lenze</b> Made in USA Inverter <i>smd</i> CANOpen: Full I/O		Type: ESMD223C4TXA Id-No: 13xxxxxx	Input: 3/PE 400/480 V 52/45 A 50-60 Hz	Output: 3/PE 0-400 / 460 V 46/40 A 22 kW 0 - 240 Hz	For detailed information refer to instruction Manual SC03 SN: 13xxxxxx012345678 ESMD223C4TXA000XX XX XX
LISTED <small>SD1</small> IND. CONT. EQ. N10104 Z519				+	
					C000

**A** Certifications

**B** Type

**C** Input Ratings

**D** Output Ratings

**E** Hardware Version

**F** Software Version

Scope of delivery	Important
<ul style="list-style-type: none"> <li>1 <i>smd</i> inverter (ESMD...) with EPM installed (see Section 4.2)</li> <li>1 Operating Instructions</li> </ul>	<p>After receipt of the delivery, check immediately whether the items delivered match the accompanying papers. Lenze does not accept any liability for deficiencies claimed subsequently.</p> <p><b>Claim</b></p> <ul style="list-style-type: none"> <li>visible transport damage immediately to the forwarder.</li> <li>visible deficiencies/incompleteness immediately to your Lenze representative.</li> </ul>



## 1 Safety Information

### General

Some parts of Lenze controllers (frequency inverters, servo inverters, DC controllers) can be live, moving and rotating. Some surfaces can be hot.

Non-authorized removal of the required cover, inappropriate use, and incorrect installation or operation creates the risk of severe injury to personnel or damage to equipment.

All operations concerning transport, installation, and commissioning as well as maintenance must be carried out by qualified, skilled personnel (IEC 364 and CENELEC HD 384 or DIN VDE 0100 and IEC report 664 or DIN VDE0110 and national regulations for the prevention of accidents must be observed).

According to this basic safety information, qualified skilled personnel are persons who are familiar with the installation, assembly, commissioning, and operation of the product and who have the qualifications necessary for their occupation.

### Application as directed

Drive controllers are components which are designed for installation in electrical systems or machinery. They are not to be used as appliances. They are intended exclusively for professional and commercial purposes according to EN 61000-3-2. The documentation includes information on compliance with the EN 61000-3-2.

When installing the drive controllers in machines, commissioning (i.e. the starting of operation as directed) is prohibited until it is proven that the machine complies with the regulations of the EC Directive 2006/42/EC (Machinery Directive); EN 60204 must be observed.

Commissioning (i.e. starting of operation as directed) is only allowed when there is compliance with the EMC Directive (2004/108/EC).

The drive controllers meet the requirements of the Low Voltage Directive 2006/95/EC. The harmonised standards of the series EN 50178/DIN VDE 0160 apply to the controllers.

**Note:** The availability of controllers is restricted according to EN 61800-3. These products can cause radio interference in residential areas. In this case, special measures can be necessary.

### Installation

Ensure proper handling and avoid excessive mechanical stress. Do not bend any components and do not change any insulation distances during transport or handling. Do not touch any electronic components and contacts.

Controllers contain electrostatically sensitive components, which can easily be damaged by inappropriate handling. Do not damage or destroy any electrical components since this might endanger your health!

### Electrical Connection

When working on live drive controllers, applicable national regulations for the prevention of accidents (e.g. VBG 4) must be observed.

The electrical installation must be carried out according to the appropriate regulations (e.g. cable cross-sections, fuses, PE connection). Additional information can be obtained from the documentation.

The documentation contains information about installation in compliance with EMC (shielding, grounding, filters and cables). These notes must also be observed for CE-marked controllers.

The manufacturer of the system or machine is responsible for compliance with the required limit values demanded by EMC legislation.



## Safety information

### Operation

Systems including controllers must be equipped with additional monitoring and protection devices according to the corresponding standards (e.g. technical equipment, regulations for prevention of accidents, etc.). You are allowed to adapt the controller to your application as described in the documentation.



#### **DANGER!**

- After the controller has been disconnected from the supply voltage, live components and power connection must not be touched immediately, since capacitors could be charged. Please observe the corresponding notes on the controller.
- Do not continuously cycle input power to the controller more than once every three minutes.
- Please close all protective covers and doors during operation.

### 1.1 Pictographs used in these Instructions

Pictograph	Signal Word	Meaning	Consequences if ignored
	<b>DANGER!</b>	Warning of Hazardous Electrical Voltage.	Reference to an imminent danger that may result in death or serious personal injury if the corresponding measures are not taken.
	<b>WARNING!</b>	Impending or possible danger for persons	Death or injury
	<b>STOP!</b>	Possible damage to equipment	Damage to drive system or its surroundings
	<b>NOTE</b>	Useful tip: If observed, it will make using the drive easier	



## Note for UL approved system with integrated controllers

UL warnings are notes which apply to UL systems. The documentation contains special information about UL.



### Warnings!

- Integral solid state protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes. The use of fuses or circuit breakers is the only approved means for branch circuit protection.
- When protected by CC and T Class Fuses, suitable for use on a circuit capable of delivering not more than 200,000 rms symmetrical amperes, at the maximum voltage rating marked on the drive.
- Additionally suitable when protected by a circuit breaker having an interrupting rating not less than 200,000 rms symmetrical amperes, at the maximum voltage rating marked on the drive. (Excludes ESMD113\_4T\_, ESMD112\_2Y\_, ESMD113\_2T\_, ESMD152\_2Y\_, ESMD153\_2T\_, ESMD222\_2Y\_, ESMD223\_4T\_, ESMD402\_2T\_, ESMD552\_2T\_, ESMD752\_2T\_, ESMD153\_4T\_, and ESMD183\_4T\_).
- Use minimum 75°C copper wire only, except for control circuits.
- For control circuits, use wiring suitable for NEC Class 1 circuits only.
- Torque Requirements are listed in section 3.2.3, Connection diagram.
- Shall be installed in a pollution degree 2 macro-environment.



### DANGER!

Risk of Electric Shock! Capacitors retain charge for approximately 180 seconds after power is removed. Disconnect incoming power and wait at least 3 minutes before touching the drive.



### DANGER!

Risque de choc électrique! Les condensateurs restent sous charge pendant environ 180 secondes après une coupure de courant. Couper l'alimentation et patienter pendant au moins 3 minutes avant de toucher l'entraînement.



### WARNING!

The opening of branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electric shock, current carrying parts and other components of the controller should be examined and replaced if damaged.



### AVERTISSEMENT!

Le déclenchement du dispositif de protection du circuit de dérivation peut être dû à une coupure qui résulte d'un courant de défaut. Pour limiter le risque d'incendie ou de choc électrique, examiner les pièces porteuses de courant et les autres éléments du contrôleur et les remplacer s'ils sont endommagés



## Technical data

## 2 Technical Data

### 2.1 Standards and Application Conditions

<b>Conformity</b>	CE	Low Voltage Directive (2006/95/EC)
<b>Approvals</b>	UL 508C	Underwriters Laboratories - Power Conversion Equipment
<b>Max. permissible motor cable length <sup>(1)</sup></b>	shielded:	50 m (low-capacitance)
	unshielded:	100 m
<b>Input voltage phase imbalance</b>	≤ 2%	
<b>Humidity</b>	≤ 95% non-condensing	
<b>Output frequency</b>	0...240 Hz	
<b>Environmental conditions</b>	Class 3K3 to EN 50178	
<b>Temperature range</b>	Transport	-25 ... +70 °C
	Storage	-20 ... +70 °C
	Operation	0 ... +55 °C (with 2.5 %/°C current derating above +40 °C)
<b>Installation height</b>	0 ... 4000 m a.m.s.l. (with 5 %/1000 m current derating above 1000 m a.m.s.l.)	
<b>Vibration resistance</b>	acceleration resistant up to 0.7 g	
<b>⚠ Earth leakage current</b>	> 3.5 mA to PE	
<b>Enclosure (EN 60529)</b>	IP 20	
<b>Protection measures against</b>	short circuit, earth fault, overvoltage, motor stalling, motor overload	
<b>Operation in public supply networks (Limitation of harmonic currents according to EN 61000-3-2)</b>	Total power connected to the mains	Compliance with the requirements <sup>(2)</sup>
	< 0.5 kW	With mains choke
	0.5 ... 1 kW	With active filter (in preparation)
	> 1 kW	Without additional measures

(1) For compliance with EMC regulations, the permissible cable lengths may change.

(2) The additional measures described only ensure that the controllers meet the requirements of the EN 61000-3-2. The machine/system manufacturer is responsible for the compliance with the regulations of the machine!



## 2.2 Ratings

Type	Power [kW]	Mains				Output Current <sup>(3)</sup>						
		Voltage, frequency		Current [A] <sup>(2)</sup>		I <sub>N</sub>			I <sub>max</sub> for 60 s			
						[A] <sup>(1)</sup>	[A] <sup>(2)</sup>	[A] <sup>(1)</sup>	[A] <sup>(2)</sup>	[A] <sup>(2)</sup>		
			1~	3~	3~	3~	3~	3~	3~	3~		
ESMD371C2YXA	0.37	1/N/PE 230 V OR 3/PE 230 V (180 V -0%...264 V +0%) 50/60 Hz (48 Hz -0%...62 Hz +0%)	4.7	2.7	2.2	2.0	3.3	3.0	3.0			
ESMD751C2YXA	0.75		8.4	4.8	4.0	3.7	6.0	5.6				
ESMD112C2YXA	1.1		12.0	6.9	6.0	5.5	9.0	8.3				
ESMD152C2YXA	1.5		12.9	7.9	6.8	6.3	10.2	9.5				
ESMD222C2YXA	2.2		17.1	10.8	9.6	8.8	14.4	13.2				
ESMD302C2TXA	3.0	3/PE 230 V (180 V -0%...264 V +0%) 50/60 Hz (48 Hz -0%...62 Hz +0%)		13.5	12.0	11.0	18.0	16.5				
ESMD402C2TXA	4.0			17.1	15.2	14.0	23	21				
ESMD552C2TXA	5.5			25	22	20	33	30				
ESMD752C2TXA	7.5			32	28	26	42	39				
ESMD113C2TXA	11			48	42	39	63	58				
ESMD153C2TXA	15			59	54	50	81	75				
				<b>400V</b>	<b>480V</b>	<b>400V</b>	<b>480V</b>	<b>400V</b>	<b>480V</b>	<b>400V</b>	<b>480V</b>	
ESMD371C4TXA	0.37		3/PE 400/480 V (320 V -0%...528 V +0%) 50/60 Hz (48 Hz -0%...62 Hz +0%)	1.6	1.4	1.3	1.1	1.2	1.0	2.0	1.7	1.8
ESMD751C4TXA	0.75	3.0		2.5	2.5	2.1	2.3	1.9	3.8	3.2	3.5	2.9
ESMD112C4TXA	1.1	4.3		3.6	3.6	3.0	3.3	2.8	5.4	4.5	5.0	4.2
ESMD152C4TXA	1.5	4.8		4.0	4.1	3.4	3.8	3.1	6.2	5.1	5.7	4.7
ESMD222C4TXA	2.2	6.4		5.4	5.8	4.8	5.3	4.4	8.7	7.2	8.0	6.6
ESMD302C4TXA	3.0	8.3		7.0	7.6	6.3	7.0	5.8	11.4	9.5	10.5	8.7
ESMD402C4TXA	4.0	10.6		8.8	9.4	7.8	8.6	7.2	14.1	11.7	12.9	10.8
ESMD552C4TXA	5.5	14.2		12.4	12.6	11.0	11.6	10.1	18.9	16.5	17.4	15.2
ESMD752C4TXA	7.5	18.1		15.8	16.1	14.0	14.8	12.9	24	21	22	19.4
ESMD113C4TXA	11	27		24	24	21	22	19.3	36	32	34	29
ESMD153C4TXA	15	35		31	31	27	29	25	47	41	43	37
ESMD183C4TXA	18.5	44		38	39	34	36	31	59	51	54	47
ESMD223C4TXA	22	52		45	46	40	42	37	69	60	64	55

- (1) For rated mains voltage and carrier frequencies 4, 6, and 8 kHz  
 (2) For rated mains voltage and carrier frequency 10 kHz  
 (3) Maximum current is a function of setting C90 (input voltage selection)




## Installation

### 3 Installation

#### 3.1 Mechanical Installation

##### 3.1.1 Dimensions and Mounting

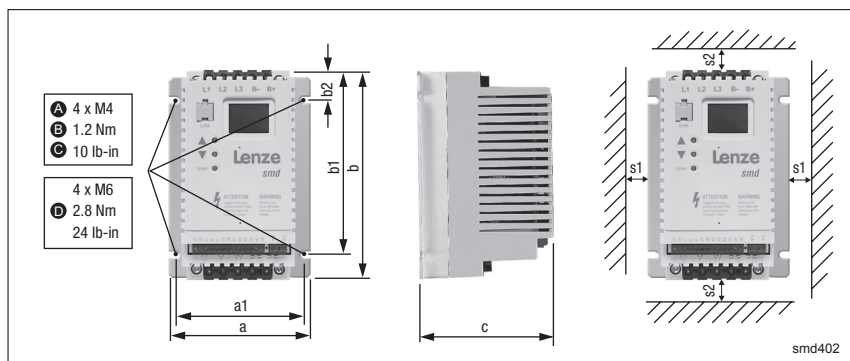

Type	a [mm]	a1 [mm]	b [mm]	b1 [mm]	b2 [mm]	c [mm]	s1 [mm]	s2 [mm]	m [kg]	
<b>A</b>	ESMD371C2YXA, ESMD371C4TXA	93	84	146	128	17	100	15	0.6	
	ESMD751C2YXA, ESMD751C4TXA	93	84	146	128	17	120	15	0.9	
	ESMD112C4TXA	93	84	146	128	17	146	15	1.0	
<b>B</b>	ESMD112C2YXA	114	105	146	128	17	133	15	1.4	
	ESMD152C4TXA	114	105	146	128	17	122	15	1.4	
	ESMD222C4TXA	114	105	146	128	17	139	15	1.4	
	ESMD152C2YXA, ESMD222C2YXA ESMD302C2TXA ESMD302C4TXA	114	105	146	128	17	171	15	2.0	
	ESMD402C2TXA ESMD402C4TXA, ESMD552C4TXA	114	105	146	100	17	171	15	2.0	
<b>C</b>	ESMD552C2TXA, ESMD752C2TXA ESMD752C4TXA, ESMD113C4TXA	146	137	197	140	17	182	30	100	3.2
	<b>D</b>	ESMD113C2TXA, ESMD153C2TXA ESMD153C4TXA... ESMD223C4TXA	195	183	248	183	23	203	30	100



#### WARNING!

Drives must not be installed where subjected to adverse environmental conditions such as: combustible, oily, or hazardous vapors or dust; excessive moisture; excessive vibration or excessive temperatures. Contact Lenze for more information.



## 3.2 Electrical Installation

### 3.2.1 Installation according to EMC Requirements

EMC Compliance with EN 61800-3/A11	
Noise emission Compliance with limit value class A according to EN 55011 if installed in a control cabinet with the appropriate footprint filter and the motor cable length does not exceed 10m	
[A] Screen clamps	
[B] Control cable	
[C] Low-capacitance motor cable (core/core $\leq 75$ pF/m, core/screen $\leq 150$ pF/m)	
[D] Electrically conductive mounting plate	
[E] Filter	

Tmd005

### 3.2.2 Fuses/Cable Cross-Sections

Type		Recommendations <sup>(1)</sup>					E.i.c.b. <sup>(2)</sup>
		Fuse	Miniature circuit breaker <sup>(5)</sup>	Fuse <sup>(3)</sup> or Breaker <sup>(6)</sup> (N. America)	Input Power Wiring (L1, L2/N, L3, PE)		
		[A]	[A]	[A]	[mm <sup>2</sup> ]	[AWG]	
1/N/PE	ESMD371C2YXA	10	C10	10	2.5	14	≥ 30 mA
	ESMD751C2YXA	16	C16	15	2.5	14	
	ESMD112C2YXA	20	C20	20	4	12	
	ESMD152C2YXA	25	C25	25	6	12	
	ESMD222C2YXA	32	C32	30	4	10	
3/PE	ESMD371C2YXA ... ESMD751C2YXA ESMD371C4TXA ... ESMD222C4TXA	10	C10	10	2.5	14	
	ESMD112C2YXA, ESMD152C2YXA ESMD302C4TXA	16	C16	12	2.5	14	
	ESMD222C2YXA	16	C16	15	2.5	12	
	ESMD402C4TXA	16	C16	15	2.5	14	
	ESMD302C2TXA ESMD552C4TXA	20	C20	20	4	12	
	ESMD402C2TXA ESMD752C4TXA	25	C25	25	6	10	
	ESMD552C2TXA, ESMD113C4TXA	40	C40	35	6	8	
	ESMD752C2TXA, ESMD153C4TXA	50	C50	45	10	8	
	ESMD183C4TXA	63	C63	60	16	6	
	ESMD113C2TXA, ESMD223C4TXA	80	C80	70	16	6	
	ESMD153C2TXA	100	C100	90	16	4	

- (1) Observe the applicable local regulations.
- (2) Pulse-current or universal-current sensitive earth leakage circuit breaker.
- (3) UL Class CC or T fast-acting current-limiting type fuses, 200,000 AIC, required. Bussman KTK-R, JLN, JJS or equivalent.
- (4) Connection without end ferrules or with attached pin end connectors.
- (5) Installations with high fault current due to large supply mains may require a type D circuit breaker.
- (6) Thermomagnetic type breakers preferred.



## Installation




### WARNING!

Per UL requirements, use a FUSE (not a circuit breaker) for 240VAC drives requiring >40A protection and for 480VAC & 600VAC drives requiring >32A protection.

### Observe the following when using E.I.c.b:

- Installation of E.I.c.b only between supplying mains and controller.
- The E.I.c.b can be activated by:
  - capacitive leakage currents between the cable screens during operation (especially with long, screened motor cables)
  - connecting several controllers to the mains at the same time
  - RFI filters

## 3.2.3 Connection Diagram

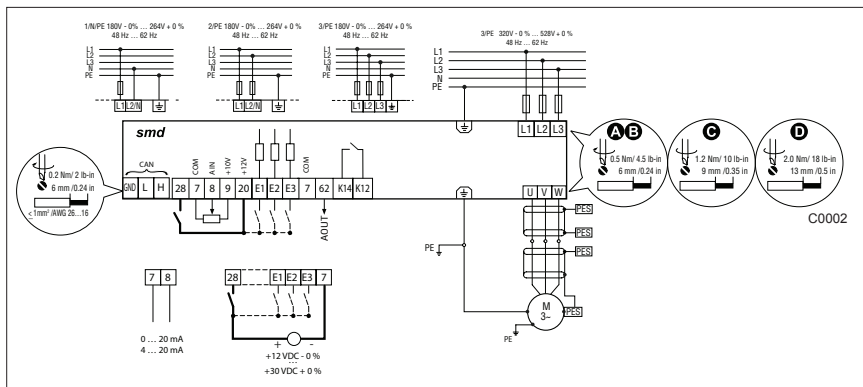

### DANGER!

- Hazard of electrical shock! Circuit potentials are up to 240 VAC above earth ground. Capacitors retain charge after power is removed. Disconnect power and wait until the voltage between B+ and B- is 0 VDC before servicing the drive.
- Do not connect mains power to the output terminals (U, V, W)! Severe damage to the drive will result.
- Do not cycle mains power more than once every three minutes. Damage to the drive will result.



## 3.2.4 Control Terminals

Terminal	Data for control connections (printed in <b>bold</b> = Lenze setting)		
<b>CAN_GND</b>	CAN earth ground	For reliable communication make sure terminal CAN_GND is connected to CAN network GND/common. If only two wires are used (CAN_H and CAN_L) in the network, connect CAN_GND to chassis/earth ground.	
<b>CAN_L</b>	CAN low	If controller is located at either end of the network, a terminating resistor (120Ω typical) should be connected across CAN_L and CAN_H	
<b>CAN_H</b>	CAN high		
<b>28</b>	Digital input Start/Stop	LOW = Stop ( <b>OFF</b> ) HIGH = Run Enable	R <sub>i</sub> = 3.3 kΩ
<b>7</b>	Reference potential		
<b>8</b>	Analog input <b>0 ... 10 V</b> (changeable under C34)	input resistance: >50 kΩ (with current signal: 250Ω)	
<b>9</b>	Internal DC supply for setpoint potentiometer	+10 V, max. 10 mA	
<b>20</b>	Internal DC supply for digital inputs	+12 V, max. 20 mA	
<b>E1</b>	Digital input configurable with CE1 <b>Activate fixed setpoint 1 (JOG1)</b>	HIGH = JOG1 active	R <sub>i</sub> = 3.3 kΩ
<b>E2</b>	Digital input configurable with CE2 <b>Direction of rotation</b>	LOW = CW rotation HIGH = CCW rotation	
<b>E3</b>	Digital input/output configurable with CE3 <b>Activate DC injection brake (DCB)</b>	HIGH = DCB active	
<b>7</b>	Reference potential		
<b>62</b>	Analog output configurable with c08 & c11		
<b>K14</b>	Relay output (normally-open contact) Configurable with C08	AC 250 V / 3 A DC 24 V / 2 A ... 240 V / 0.22 A	
<b>K12</b>	<b>Fault (TRIP)</b>		

LOW = 0 ... +3 V, HIGH = +12 ... +30 V

### Protection against contact


- All terminals have basic isolation (single insulating distance)
- Protection against contact can only be ensured by additional measures (i.e. double insulation)



# Commissioning

## 4 Commissioning


### 4.1 Parameter Setting

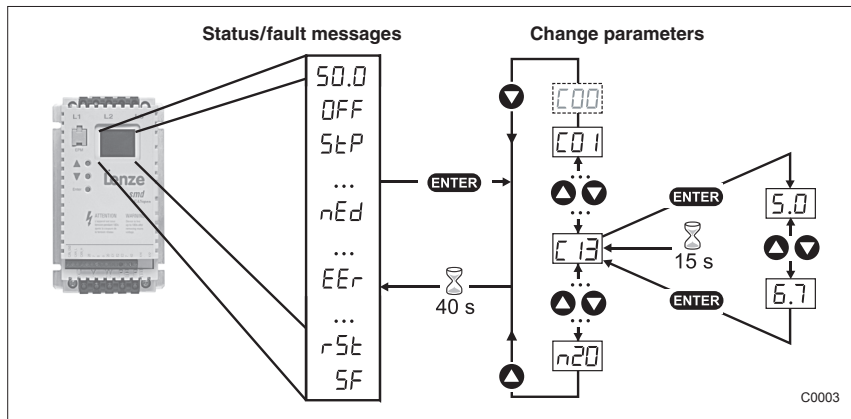

#### NOTE

If the password function is enabled, the password must be entered into C00 to access the parameters. C00 will not appear unless the password function is enabled. See C94.

### 4.2 Electronic Programming Module (EPM)





The EPM contains the controller's memory. Whenever parameter settings are changed, the values are stored in the EPM. It can be removed, but must be installed for the controller to operate (a missing EPM will trigger an **F I** fault). The controller ships with protective tape over the EPM that can be removed after installation.

An optional EPM Programmer (model EEP1M1RA ) is available that allows: the controller to be programmed without power; OEM settings to be default settings; fast copying of EPMs when multiple controllers require identical settings. It can also store up to 60 custom parameter files for even faster controller programming.



## 4.3 Parameter Menu

Code		Possible Settings		IMPORTANT	
No.	Name	Lenze	Selection		
<b>C00</b>	Password entry	0	0 999	Visible only when password is active (see C94)	
<b>C01</b>	Setpoint and control source	0	Setpoint source:	Control configuration: Control = terminals Programming = keypad/limited CANopen Monitoring = CANopen <b>Note:</b> RPDOs not processed in these modes	
			0 Analog input (terminal 8; see C34)		Control = terminals Programming = CANopen/keypad Monitoring = CANopen <b>Note:</b> Only frequency setpoint part of RPDOs are processed in this mode
			1 Code c40		Control = CANopen Programming = CANopen/keypad Monitoring = CANopen
			2 CANopen		Control = CANopen Programming = CANopen/keypad Monitoring = CANopen
<b>C02</b>	Load Lenze setting	0	0 No action/loading complete	<ul style="list-style-type: none"> <li>C02 = 1...4 only possible with <b>OFF</b> or <b>inh</b></li> <li>C02 = 2 : C11, C15 = 60 Hz</li> </ul>	
			1 Load 50 Hz Lenze settings		
			2 Load 60 Hz Lenze settings		
			3 Load OEM settings (if present)		
			4 Translate		
	<b>WARNING!</b> C02 = 1...3 overwrites all settings! TRIP circuitry may be disabled! Check codes CE1...CE3.				
	<b>NOTE</b> If an EPM that contains compatible data from a previous software version is installed, C02 = 4 converts the data to the current version.				



# Commissioning

Code		Possible Settings		IMPORTANT	
No.	Name	Lenze	Selection		
CE1	Configuration - Digital input E1	1	1 Activate fixed setpoint 1 (JOG1)	<ul style="list-style-type: none"> <li>Use C37...C39 to adjust fixed setpoints</li> <li>Activate JOG3: Both terminals = HIGH</li> </ul>	
			2 Activate fixed setpoint 2 (JOG2)		
			3 DC braking (DCB)	See also C36	
			4 Direction of rotation	LOW = CW rotation HIGH = CCW rotation	
			5 Quick stop	Controlled deceleration to standstill, active LOW; Set decel rate in C13	
			6 CW rotation	CW rotation = LOW and CCW rotation = LOW: Quick stop; Open-circuit protected	
CE2	Configuration - Digital input E2	4	7 CCW rotation	UP = LOW and DOWN = LOW: Quick stop; Use momentary NC contacts	
			8 UP (setpoint ramp-up)		
			9 DOWN (setpoint ramp-down)	Active LOW, triggers EE <sup>r</sup> (motor coasts to standstill) <b>NOTE:</b> NC thermal contact from the motor can be used to trigger this input	
			10 TRIP set		
			11 TRIP reset	See also c70	
			12 No action	can be used if Ex inputs are used only as CANopen digital inputs	
CE3	Configuration - Digital input/output E3	3	1...12 (same as above)	<ul style="list-style-type: none"> <li>1...11 configures terminal E3 as an input</li> <li>20...30 configures terminal E3 as a current-sourcing (PNP) output rated 12 VDC / 50 mA</li> </ul>	
			13...19 (reserved)		
			20 Ready		
			21 Fault		
			22 Motor is running		
			23 Motor is running - CW rotation		
			24 Motor is running - CCW rotation		
			25 Output frequency = 0 Hz		
			26 Frequency setpoint reached		
			27 Threshold (C17) exceeded		
			28 Current limit reached		in either motor or generator mode
			29 Dynamic Braking		
30 CANopen Control	output controlled by RPDO (h66,h76 = 4)				
			<b>NOTE</b> A <b>CFG</b> fault will occur under the following conditions: <ul style="list-style-type: none"> <li>E1...E3 settings are duplicated (each setting can only be used once)</li> <li>One input is set to UP and another is not set to DOWN, or vice-versa</li> </ul>		
COB	Configuration - Relay output (terminals K14 and K12)	1	Relay is energized if		
			0 Ready		
			1 Fault		
			2 Motor is running		
			3 Motor is running - CW rotation		
			4 Motor is running - CCW rotation		
5 Output frequency = 0 Hz					
6 Frequency setpoint reached					
7 Threshold (C17) exceeded					
8 Current limit reached	in either motor or generator mode				
9 CANopen Control	Output controlled by RPDO (h66,h76 = 4)				
C10	Minimum output frequency	0.0	0.0 (Hz)	240	<ul style="list-style-type: none"> <li>Output frequency at 0% analog setpoint</li> <li>C10 not active for fixed setpoints or setpoint selection via c40</li> </ul>


# Commissioning



Code		Possible Settings			IMPORTANT
No.	Name	Lenze	Selection		
C11	Maximum output frequency	50.0	7.5 {Hz}	240	<ul style="list-style-type: none"> <li>Output frequency at 100% analog setpoint</li> <li>C11 is never exceeded</li> </ul>
			<b>WARNING!</b> Consult motor/machine manufacturer before operating above rated frequency. Overspeeding the motor/machine may cause damage to equipment and injury to personnel!		
C12	Acceleration time	5.0	0.0 {s}	999	<ul style="list-style-type: none"> <li>C12 = frequency change 0 Hz...C11</li> <li>C13 = frequency change C11...0 Hz</li> <li>For S-ramp accel/decel, adjust c82</li> </ul>
C13	Deceleration time	5.0	0.0 {s}	999	
C14	Operating Mode	2	0 Linear characteristic with Auto-Boost		<ul style="list-style-type: none"> <li>Linear characteristic: for standard applications</li> <li>Square-law characteristic: for fans and pumps with square-law load characteristic</li> <li>Auto boost: load-dependent output voltage for low-loss operation</li> </ul>
			1 Square-law characteristic with Auto-Boost		
			2 Linear characteristic with constant $V_{min}$ boost		
			3 Square-law characteristic with constant $V_{min}$ boost		
C15	V/f reference point	50.0	25.0 {Hz}	999	<p style="text-align: right;">smd006</p>
			Set the rated motor frequency (nameplate) for standard applications		
C16	$V_{min}$ boost (optimization of torque behavior)	4.0	0.0 {%	40.0	Set <b>after</b> commissioning: The unloaded motor should run at slip frequency (approx. 5 Hz), increase C16 until motor current (C54) = 0.8 x rated motor current
C17	Frequency threshold ( $Q_{min}$ )	0.0	0.0 {Hz}	240	See C08, selection 7 Reference: setpoint
C18	Chopper frequency	2	0 4 kHz		<ul style="list-style-type: none"> <li>As chopper frequency is increased, motor noise is decreased</li> <li>Observe derating in Section 2.2</li> <li>Automatic derating to 4 kHz at 1.2 x I.</li> </ul>
			1 6 kHz		
			2 8 kHz		
			3 10 kHz		
C21	Slip compensation	0.0	0.0 {%	40.0	Change C21 until the motor speed no longer changes between no load and maximum load
C22	Current limit	150	30 {%	150	<ul style="list-style-type: none"> <li>When the limit value is reached, either the acceleration time increases or the output frequency decreases</li> <li>When C90 = 2, max setting is 180%</li> </ul>
C24	Accel boost	0.0	0.0 {%	20.0	Accel boost is only active during acceleration
C34	Configuration - analog input	0	0 0...10 V		
			1 0...5 V		
			2 0...20 mA		
			3 4...20 mA		
C36	Voltage - DC injection brake (DCB)	4.0	0.0 {%	50.0	<ul style="list-style-type: none"> <li>See CE1...CE3 and c06</li> <li>Confirm motor suitability for use with DC braking</li> </ul>



## Commissioning

Code		Possible Settings				IMPORTANT
No.	Name	Lenze	Selection			
c37	Fixed setpoint 1 (JOG 1)	20.0	0.0	{Hz}	240	
c38	Fixed setpoint 2 (JOG 2)	30.0	0.0	{Hz}	240	
c39	Fixed setpoint 3 (JOG 3)	40.0	0.0	{Hz}	240	
c46	Frequency setpoint		0.0	{Hz}	240	Display: Setpoint via CANopen, analog input, or function UP/DOWN
c50	Output frequency		0.0	{Hz}	240	Display
c53	DC bus voltage		0.0	{%}	255	Display
c54	Motor current		0.0	{%}	255	Display
c87	Motor rated speed	1390	300	{RPM}	32000	Set to motor nameplate speed
c89	Motor rated frequency	50	10	{Hz}	1000	Set to motor nameplate frequency
c90	Input voltage selection		0	Auto		Automatically sets to Low (1) or High (2) upon next power-up, depending on input voltage
			1	Low		For 200 V or 400 V input
			2	High		For 240 V or 480 V input
			 <b>NOTE</b>			
<ul style="list-style-type: none"> <li>To simplify commissioning, the Lenze setting is preset at the factory, depending on model: C90 = 1 for 400/480 V models C90 = 2 for 230/240 V models</li> <li>Upon reset (C02 = 1, 2), C90 = 0. Confirm correct setting after next power-up.</li> </ul>						
c94	User password	0	0		999	When set to a value other than 0, must enter password at C00 to access parameters
			Changing from "0" (no password), value will start at 763			
c99	Software version					Display, format: x.yz
c06	Holding time - automatic DC injection brake (Auto-DCB)	0.0	0.0	{s}	999	<ul style="list-style-type: none"> <li>Automatic motor braking below 0.1 Hz by means of motor DC current for the entire holding time (afterwards: U, V, W inhibited)</li> <li>Confirm motor suitability for use with DC braking</li> </ul>
c08	Analog output scaling	100	1.0		999	When 10 VDC is output at terminal 62, it will equal this value (see c11)
c11	Configuration - Analog output (62)	0	0	None		
			1	Output frequency 0-10 VDC		Use c08 to scale signal
			2	Output frequency 2-10 VDC		<b>Example:</b> c11 = 1 and c08 = 100: At 50 Hz, terminal 62 = 5 VDC At 100 Hz, terminal 62 = 10 VDC
			3	Load 0-10 VDC		
			4	Load 2-10 VDC		
			5	CANopen Control		Value set by RPDO (h66,h76 = 4) (c08 not used for scaling)



Code		Possible Settings			IMPORTANT
No.	Name	Lenze	Selection		
c20	I <sup>2</sup> t switch-off (thermal motor monitoring)	100	30 { % } 100 100% = <i>smd</i> rated output current		<ul style="list-style-type: none"> <li>Triggers <b>OC6</b> fault when motor current exceeds c20 for too long</li> <li>Correct setting = (motor nameplate current) / (<i>smd</i> output current rating) X 100%</li> <li><b>Example:</b> motor = 6.4 amps and <i>smd</i> = 7.0 amps; correct setting = 91% (6.4 / 7.0 = 0.91 x 100% = 91%)</li> </ul>
			<b>WARNING!</b> Maximum setting is rated motor current (see nameplate). Does not provide full motor protection!		
c21	Motor Overload Type	00	00 Speed Compensation Reduces the allowable continuous current when operating below 30Hz. 01 No Speed Compensation Example: Motor is cooled by forced ventilation as apposed to shaft mounted, self cooling fans.		<p>Ir: rated current (%), f: motor frequency (Hz)</p>
c40	Frequency setpoint via keys ▲ ▼	0.0	0.0 { Hz } 240		Only active if C01 = 1
c42	Start condition (with mains on)	1	0 Start after LOW-HIGH change at terminal 28 1 Auto start if terminal 28 = HIGH		See also c70
			<b>WARNING!</b> Automatic starting/restarting may cause damage to equipment and/or injury to personnel! Automatic starting/restarting should only be used on equipment that is inaccessible to personnel.		
c60	Mode selection for c61	0	0 Monitoring only 1 Monitoring and editing		c60 = 1 allows the keys ▲ ▼ to adjust speed setpoint (c40) while monitoring c61
c61	Present status/error		status/error message		<ul style="list-style-type: none"> <li>Display</li> <li>Refer to Section 5 for explanation of status and error messages</li> </ul>
c62	Last error		error message		
c63	Last error but one				
c70	Configuration TRIP reset (error reset)	0	0 TRIP reset after LOW-HIGH change at terminal 28, mains switching, or after LOW-HIGH change at digital input "TRIP reset" 1 Auto-TRIP reset		<ul style="list-style-type: none"> <li>Auto-TRIP reset after the time set in c71</li> <li>More than 8 errors in 10 minutes will trigger <b>r5t</b> fault</li> </ul>
			<b>WARNING!</b> Automatic starting/restarting may cause damage to equipment and/or injury to personnel! Automatic starting/restarting should only be used on equipment that is inaccessible to personnel.		
c71	Auto-TRIP reset delay	0.0	0.0 { s } 60.0		See c70
c78	Operating time counter		Display: Total time in status "Start"		0...999 h: format xxx 1000...9999 h: format x.xx (x1000)
c79	Mains connection time counter		Display: Total time of mains = on		10000...99999 h: format xx.x (x1000)



# Commissioning

Code		Possible Settings		IMPORTANT
No.	Name	Lenze	Selection	
<b>CANopen / System bus parameters</b>				
<b>h42</b>	Guard time	0	0 (ms) 65535	<ul style="list-style-type: none"> <li>• h42 x h43 = node life time</li> <li>• If RTR frame with ID = 0x700 + Node ID (h50) is not received during the node life time, the controller will react according to h44</li> <li>• If heart beat message is enabled, the guard function is disabled</li> <li>• h44 is only active when C01 = 3 and h42 x h43 &gt; 0</li> </ul>
<b>h43</b>	Life time factor	0	0 255	
<b>h44</b>	Guard time event reaction	0	0 Not active 1 Inhibit 2 Quick stop 3 Trip fault FC3	
<b>h45</b>	Error behavior	1	0 Transition to pre-operational (only if current state is operational) 1 No state change 2 Transition to stopped	
<b>h46</b>	Message monitoring time	0	0 (ms) 65535	<ul style="list-style-type: none"> <li>• h46 and h47 can be used to monitor all valid messages (e.g. SDO, SYNC, PDO...)</li> <li>• h46 = 0 or h47 = 0 disables message monitoring function</li> <li>• h47 is only active when C01 = 3</li> </ul>
<b>h47</b>	Message monitoring time out reaction	0	0 Not active 1 Inhibit 2 Quick stop 3 Trip fault FC3	
<b>h48</b>	Monitoring timeout status		Bits: 0 Guard time timeout 1 No valid message received 2 RPD01 timeout 3 RPD02 timeout 4 CAN initialization fault 5 reserved 6 reserved 7 reserved	
<b>h49</b>	CAN controller status value (8-bit value)		0 Receive/transmit error warning flag (96 or more errors) 1 Receive error warning flag (96 or more receive errors) 2 Transmit error warning flag (96 or more transmit errors) 3 Receive error passive flag (128 or more receive errors) 4 Transmit error passive flag (128 or more transmit errors) 5 Bus-off error flag 6 Receive buffer 0 overflow flag 7 Receive buffer 1 overflow flag	<ul style="list-style-type: none"> <li>• Read-only</li> <li>• CAN warnings and errors</li> </ul>
<b>h50<sup>(1)</sup></b>	CAN address (Node ID)	1	1 127	if h53 = 0, 1: maximum setting = 63

# Commissioning



Code		Possible Settings		IMPORTANT
No.	Name	Lenze	Selection	
h5 <sup>(1)</sup>	CAN baud rate	5	0 10 kbps (max distance = 5000m) 1 20 kbps (max distance = 2500m) 2 50 kbps (max distance = 1000m) 3 125 kbps (max distance = 500m) 4 250 kbps (max distance = 250m) 5 500 kbps (max distance = 100m)	
h52 <sup>(1)</sup>	CAN Boot-up mode	0	0 Pre-operational 1 Operational 2 Pseudo master	<ul style="list-style-type: none"> <li>h52 = 0: Controller enters pre-operational state</li> <li>h52 = 1: Controller enters operational state automatically (Slave with autostart enabled 0x1F80 NMT bootup - bit 2)</li> <li>h52 = 2: Controller sends "NMT start all nodes" after boot-up time (h55) and enters operational state (not NMT master)</li> </ul>
h53 <sup>(1)</sup>	Parameter channel 2 (SDO#2 support for Lenze Systembus)	0	0 Enable: Node ID range (1...63) with default COB ID for SYNC, RPDO, and TPDO 1 Enable: Node ID range (1...63) with programmable COB ID using h54, h60, h70, h80, h90 2 Disable: Node ID range (1...127) with default COB ID for SYNC, RPDO, and TPDO 3 Disable: Node ID range (1...127) with programmable COB ID using h54, h60, h70, h80, h90	<ul style="list-style-type: none"> <li>h53 = 0, 1: CAN address 1...63; 64...127 used for SDO2</li> <li>SDO#1 COB ID = 1536 + Node ID</li> <li>SDO#2 COB ID = 1600 + Node ID (if enabled)</li> </ul>
h54 <sup>(1)</sup>	SYNC COB ID	128	0 2047	<b>Note:</b> Controller does not generate SYNC object
h55 <sup>(1)</sup>	Boot up time	3000	0 {ms} 65535	Controller sends "NMT start all nodes" message after this delay (active only when h52 = 2)
h56	Heartbeat time	2000	0 {ms} 65535	<ul style="list-style-type: none"> <li>Producer heartbeat time</li> <li>h56 = 0 disables heartbeat transmission</li> </ul>
h58	Reset CAN node	0	0 No action 1 Reset CAN communication	On transition from 0 to 1, re-initializes CAN controller and activates changes made to parameters marked with <sup>(1)</sup>
			<b>WARNING!</b> CAN re-initialization may activate new RPDO configurations, which can result in changes to present controller state, including starting.	
h59	CANopen status		0 Not initialized 1 Initializing 2 Stopped 3 Pre-operational 4 reserved 5 Operational	<ul style="list-style-type: none"> <li>Read-only</li> <li><b>Note:</b> RPDOs and TPDOs are only active in operational state (h59 = 5)</li> </ul>

<sup>(1)</sup> These parameters take effect only after power-up, h58 reset, "NMT reset node", or "NMT reset communication services"



# Commissioning

Code		Possible Settings		IMPORTANT
No.	Name	Lenze	Selection	
<b>RPDO#1 configuration parameters</b>				
<b>h50<sup>(1)</sup></b>	RPDO#1 COB ID	513	0 2047	If h53 = 0, 2: Setting will change to 512 + Node ID during power-up or h58 reset.
<b>h51<sup>(1)</sup></b>	RPDO#1 enable/disable	1	0 Disable 1 Enable	
<b>h62</b>	RPDO#1 transmission type	255	0 255	<ul style="list-style-type: none"> <li>h62 = 0...240: transfer on every SYNC received.</li> <li>h62 = 254, 255: immediate transfer</li> </ul>
<b>h64</b>	RPDO#1 event monitoring timer	0	0 {ms} 65535	h64 = 0: monitoring disabled
<b>h65</b>	RPDO#1 time out reaction	0	0 Not active 1 Inhibit 2 Quick stop 3 Trip fault FC3	Only active when C01 = 3
<b>h66<sup>(1)</sup></b>	RPDO#1 mapping (see RPDO mapping details)	0	0 C0135 control word + C46 signed 1 C0135 control word + C46 unsigned 2 402 Drives and Motion Control: PDO Controlword 0x6040 3 402 Drives and Motion Control: PDO Controlword 0x6040 + vl target velocity 0x6042 4 C0135 Controlword + C46 signed and scaled + Digital output + analog output	C46 scaling: $\pm 50 = \pm 1.0$ Hz C46 scaling: 10 = 1.0 Hz <ul style="list-style-type: none"> <li>vl target velocity units = signed RPM</li> <li>RPM calculation based on C87 and C89</li> </ul> C46 scaling: +/- 16384 = C11
<b>h69</b>	RPDO#1 status		0 255	<ul style="list-style-type: none"> <li>Read-only</li> <li>Number of received RPDO#1 messages</li> <li>Above 255, starts over at 0</li> </ul>

<sup>(1)</sup> These parameters take effect only after power-up, h58 reset, "NMT reset node", or "NMT reset communication services"

# Commissioning



Code		Possible Settings		IMPORTANT
No.	Name	Lenze	Selection	
<b>RPDO#2 configuration parameters</b>				
<b>h70<sup>(1)</sup></b>	RPDO#2 COB ID	769	0 2047	If h53 = 0, 2: Setting will change to 768 + Node ID during power-up or h58 reset.
<b>h71<sup>(1)</sup></b>	RPDO#2 enable/disable	0	0 Disable 1 Enable	
<b>h72</b>	RPDO#2 transmission type	255	0 255	<ul style="list-style-type: none"> <li>• h72 = 0...240: transfer on every SYNC received</li> <li>• h72 = 254, 255: immediate transfer</li> </ul>
<b>h74</b>	RPDO#2 event monitoring timer	0	0 {ms} 65535	h74 = 0: monitoring disabled
<b>h75</b>	RPDO#2 time out reaction	0	0 Not active 1 Inhibit 2 Quick stop 3 Trip fault F[3]	Only active when C01 = 3
<b>h76<sup>(1)</sup></b>	RPDO#2 mapping (see RPDO mapping details)	0	0 C0135 control word + C46 signed 1 C0135 control word + C46 unsigned 2 402 Drives and Motion Control: PDO Controlword 0x6040 3 402 Drives and Motion Control: PDO Controlword 0x6040 + vl target velocity 0x6042 4 C0135 Controlword + C46 signed and scaled + Digital output + analog output	C46 scaling: $\pm 50 = \pm 1.0$ Hz C46 scaling: $10 = 1.0$ Hz <ul style="list-style-type: none"> <li>• vl target velocity units = signed RPM</li> <li>• RPM calculation based on C87 and C89</li> </ul> C46 scaling: $\pm 16384 = C11$
<b>h79</b>	RPDO#2 status		0 255	<ul style="list-style-type: none"> <li>• Read-only</li> <li>• Number of received RPDO#2 messages</li> <li>• Above 255, starts over at 0</li> </ul>

<sup>(1)</sup> These parameters take effect only after power-up, h58 reset, "NMT reset node", or "NMT reset communication services"



# Commissioning

Code		Possible Settings		IMPORTANT	
No.	Name	Lenze	Selection		
<b>TPDO#1 configuration parameters</b>					
<b>h80</b> <sup>(1)</sup>	TPDO#1 COB ID	385	0	2047	If h53 = 0, 2: Setting will change to 384 + Node ID during power-up or h58 reset.
<b>h81</b> <sup>(1)</sup>	TPDO#1 enable/disable	1	0 Disable 1 Enable (no RTR) 2 Enable (with RTR)		Enable individual polling of TPDO#1
<b>h82</b>	TPDO#1 transmission type	255	0	255	<ul style="list-style-type: none"> <li>h82 = 0..240: Transmit TPDO#1 after every n<sup>th</sup> SYNC received + Event + RTR (if enabled)</li> <li>h82 = 253: Event + RTR (if enabled)</li> <li>h82 = 254: COS triggered (WORD0 of TPDO#1) + Event + RTR (if enabled)</li> <li>h82 = 255: Event + RTR (if enabled)</li> </ul>
<b>h83</b> <sup>(1)</sup>	TPDO#1 inhibit time	50	0	{0.1 ms} 65535	Sets minimum time between TPDO#1 transmissions (h83 = 50 = 5.0 ms)
<b>h84</b>	TPDO#1 event timer	0	0	{ms} 65535	<ul style="list-style-type: none"> <li>Sets the fixed interval for TPDO#1 transmission</li> <li>h84 = 0: disables event timer</li> </ul>
<b>h86</b> <sup>(1)</sup>	TPDO#1 mapping (see TPDO mapping details)	0	0 C0150 + C50 signed 1 C0150 + C50 unsigned 2 Controller status in C0135 format + frequency setpoint signed 3 Controller status in C0135 format + frequency setpoint unsigned 4 402 Device profile: Statusword 0x6041 5 402 Device profile: Statusword 0x6041 + vl control effort 0x6044 6 C0150 + C50 signed and scaled + digital input + analog input		C50 scaling: $\pm 50 = \pm 1.0$ Hz C50 scaling: 10 = 1.0 Hz Can be used to control other controllers (see example in section 4.5) <ul style="list-style-type: none"> <li>vl control effort units = signed RPM</li> <li>RPM calculation based on C87 and C89</li> </ul> C50 scaling: +/- 16384 = C11
<b>h87</b>	TPDO#1 WORD0 bit mask	65535	0	65535	<ul style="list-style-type: none"> <li>COS (change of state) bit mask applied to WORD0 of TPDO selected by h86.</li> <li>h87 = 65535: activates all bits of WORD0 for COS triggering</li> <li>h87 = 0: disables COS triggering</li> </ul>
<b>h89</b>	TPDO#1 status		0	255	<ul style="list-style-type: none"> <li>Read-only</li> <li>Number of transmitted TPDO#1 messages</li> <li>Above 255, starts over at 0</li> </ul>

<sup>(1)</sup> These parameters take effect only after power-up, h58 reset, "NMT reset node", or "NMT reset communication services"

# Commissioning



Code		Possible Settings		IMPORTANT
No.	Name	Lenze	Selection	
<b>TPDO#2 configuration parameters</b>				
<b>h90</b> <sup>(1)</sup>	TPDO#2 COB ID	641	0 2047	If h53 = 0, 2: Setting will change to 640 + Node ID during power-up or h58 reset.
<b>h91</b> <sup>(1)</sup>	TPDO#2 enable/disable	0	0 Disable 1 Enable (no RTR) 2 Enable (with RTR)	Enable individual polling of TPDO#2
<b>h92</b>	TPDO#2 transmission type	255	0 255	<ul style="list-style-type: none"> <li>• h92 = 0...240: Transmit TPDO#2 after every n<sup>th</sup> SYNC received + Event + RTR (if enabled)</li> <li>• h92 = 253: Event + RTR (if enabled)</li> <li>• h92 = 254: COS triggered (WORD0 of TPDO#2) + Event + RTR (if enabled)</li> <li>• h92 = 255: Event + RTR (if enabled)</li> </ul>
<b>h93</b> <sup>(1)</sup>	TPDO#2 inhibit time	50	0 {0.1 ms} 65535	Sets minimum time between TPDO#2 transmissions (h93 = 50 = 5.0 ms)
<b>h94</b>	TPDO#2 event timer	0	0 {ms} 65535	<ul style="list-style-type: none"> <li>• Sets the fixed interval for TPDO#2 transmission</li> <li>• h94 = 0: disables event timer</li> </ul>
<b>h96</b> <sup>(1)</sup>	TPDO#2 mapping (see TPDO mapping details)	0	0 C0150 + C50 signed 1 C0150 + C50 unsigned 2 Controller status in C0135 format + frequency setpoint signed 3 Controller status in C0135 format + frequency setpoint unsigned 4 402 Device profile: Statusword 0x6041 5 402 Device profile: Statusword 0x6041 + vl control effort 0x6044 6 C0150 + C50 signed and scaled + digital input + analog input	C50 scaling: $\pm 50 = \pm 1.0$ Hz C50 scaling: $10 = 1.0$ Hz Can be used to control other controllers (see example in section 4.5) <ul style="list-style-type: none"> <li>• vl control effort units = signed RPM</li> <li>• RPM calculation based on C87 and C89</li> </ul> C50 scaling: +/- 16384 = C11
<b>h97</b>	TPDO#2 WORD0 bit mask	65535	0 65535	<ul style="list-style-type: none"> <li>• COS (change of state) bit mask applied to WORD0 of TPDO selected by h96.</li> <li>• h97 = 65535: activates all bits of WORD0 for COS triggering</li> <li>• h97 = 0: disables COS triggering</li> </ul>
<b>h99</b>	TPDO#2 status		0 255	<ul style="list-style-type: none"> <li>• Read-only</li> <li>• Number of transmitted TPDO#2 messages</li> <li>• Above 255, starts over at 0</li> </ul>
<b>n20</b>	Power up state	0	0 Quick stop 1 Inhibit	Selects controller power up state when C01 = 3 (CANopen control)

<sup>(1)</sup> These parameters take effect only after power-up, h58 reset, "NMT reset node", or "NMT reset communication services"



# Commissioning

## 4.4 CANopen Mapping Details

### 4.4.1 RPDO Mapping (h66 / h76)

Bit	h66 / h76 setting = 0
0	JOG1, JOG2, JOG3 0 = C46 active 1 = JOG1 (C37) active
1	2 = JOG2 (C38) active 3 = JOG3 (C39) active
2	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
3	Quick stop 0 = Quick stop not active 1 = Quick stop active
4	reserved
5	reserved
6	reserved
7	reserved
8	reserved
9	Controller inhibit 0 = No controller inhibit 1 = Controller inhibit
10	reserved
11	TRIP reset TRIP reset on transition from 0 to 1
12	reserved
13	reserved
14	DC brake 0 = DC brake not active 1 = DC brake active
15	reserved
WORD1	<ul style="list-style-type: none"> <li>Signed frequency setpoint written to C46</li> <li>Frequency setpoint [Hz] = WORD1 value / 50</li> <li>Example 1: Requested setpoint = CW at 34.5 Hz = <math>34.5 \times 50 = 1725 = 0x06BD</math></li> <li>Example 2: Requested setpoint = CCW at 44.5 Hz = <math>-(44.5 \times 50) = -2225 = 0xF74F</math></li> </ul> <b>Note:</b> Setpoint sign overrides Bit 2 in WORD0
WORD2	reserved (not evaluated)
WORD3	reserved (not evaluated)

Bit	h66 / h76 setting = 1
0	JOG1, JOG2, JOG3 0 = C46 active 1 = JOG1 (C37) active
1	2 = JOG2 (C38) active 3 = JOG3 (C39) active
2	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
3	Quick stop 0 = Quick stop not active 1 = Quick stop active
4	reserved
5	reserved
6	reserved
7	reserved
8	reserved
9	Controller inhibit 0 = No controller inhibit 1 = Controller inhibit
10	reserved
11	TRIP reset TRIP reset on transition from 0 to 1
12	reserved
13	reserved
14	DC brake 0 = DC brake not active 1 = DC brake active
15	reserved
WORD1	<ul style="list-style-type: none"> <li>Unsigned frequency setpoint written to C46</li> <li>Frequency setpoint [Hz] = WORD1 value / 10</li> <li>Example: Requested setpoint = CW at 34.5 Hz = <math>34.5 \times 10 = 0x0159</math></li> <li>Direction is set by bit 2 in WORD0</li> </ul>



WORD0 - Controlword 0x6040		h66 / h76 setting = 2	WORD0 - Controlword 0x6040		h66 / h76 setting = 3
Bit			Bit		
0		0 = switch off <sup>(2)</sup> 1 = switch on	0		0 = switch off <sup>(2)</sup> 1 = switch on
1		0 = disable voltage <sup>(2)</sup> 1 = enable voltage	1		0 = disable voltage <sup>(2)</sup> 1 = enable voltage
2		0 = execute quick stop 1 = not quick stop	2		0 = execute quick stop 1 = not quick stop
3		0 = inhibit <sup>(2)</sup> 1 = enable	3		0 = inhibit <sup>(2)</sup> 1 = enable
4		reserved	4		reserved
5		reserved	5		reserved
6		reserved	6		reserved
7		fault reset on transition from 0 to 1	7		fault reset on transition from 0 to 1
8		0 = execute motion 1 = halt <sup>(2)</sup>	8		0 = execute motion 1 = halt <sup>(2)</sup>
9		reserved	9		reserved
10		reserved	10		reserved
11		Direction of rotation 0 = CW (forward) 1 = CCW (reverse)	11		Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
12		JOG1, JOG2, JOG3 0 = C46 active 1 = JOG1 (C37) active	12		JOG1, JOG2, JOG3 0 = C46 active 1 = JOG1 (C37) active
13		2 = JOG2 (C38) active 3 = JOG3 (C39) active	13		2 = JOG2 (C38) active 3 = JOG3 (C39) active
14		DC brake 0 = DC brake not active 1 = DC brake active	14		DC brake 0 = DC brake not active 1 = DC brake active
15		reserved	15		reserved
			WORD1	<ul style="list-style-type: none"> <li>Signed vI target velocity 0x6042 (RPM)</li> <li>RPM is calculated based on C87 and C89</li> <li>Example 1 (C87 = 1390 RPM, C89 = 50 Hz): Requested setpoint CW at 25.0 Hz = <math>25.0 \times 1390/50 = 695 = 0x02B7</math></li> <li>Example 2 (C87 = 1390 RPM, C89 = 50 Hz): Requested setpoint CCW 44.5 Hz = <math>-(44.5 \times 1390/50) = -1237 = 0xFB2B</math></li> </ul>	

<sup>(2)</sup> Implemented as inhibit; all indicated bits must be in opposite state for controller to be enabled.



# Commissioning

Bit	h66 / h76 setting = 4
0	JOG1, JOG2, JOG3 0 = C46 active 1 = JOG1 (C37) active 2 = JOG2 (C38) active 3 = JOG3 (C39) active
1	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
2	Quick stop 0 = Quick stop not active 1 = Quick stop active
3	reserved
4	reserved
5	reserved
6	reserved
7	reserved
8	reserved
9	Controller inhibit 0 = No controller inhibit 1 = Controller inhibit
10	reserved
11	TRIP reset TRIP reset on transition from 0 to 1
12	reserved
13	reserved
14	DC brake 0 = DC brake not active 1 = DC brake active
15	reserved
WORD1	<ul style="list-style-type: none"> <li>Speed signed scaled +/- 16384 == C11 (max frequency)</li> <li><b>Example 1:</b> Requested setpoint = CW at 34.5 Hz and C11 = 50.0Hz: Setpoint = <math>\text{roundup}(34.5 * 16384/50) = 11305 = 0x2C29</math></li> <li><b>Example 2:</b> Requested setpoint = CCW at 44.5 Hz and C11 = 50.0Hz: = <math>-\text{roundup}(44.5 * 16384/50) = -14582 = 0xC70A</math></li> </ul> <b>Note:</b> Setpoint sign overrides Bit 2 in WORD0
WORD2	Digital outputs (RELAY + E3) <ul style="list-style-type: none"> <li>Bit 0 - RELAY - (if C08 set to selection 9)</li> <li>Bit 1 - E3 (if CE3 set to selection 30)</li> </ul>
WORD3	Analog output 0-1000 – corresponds to 0-10V ex. 600 -> 6.0V (if c11 set to selection 5)



## 4.4.2 TPDO Mapping (h86 / h96)

Bit	h86 / h96 setting = 0
0	reserved
1	0 = Pulses to power stage enabled 1 = Pulses to power stage Inhibited
2	0 = Current limit not reached 1 = Current limit reached
3	reserved
4	0 = Actual frequency < > setpoint 1 = Actual frequency = setpoint
5	0 = Not above threshold (C17) 1 = Above threshold (C17)
6	0 = Actual frequency < > 0 Hz 1 = Actual frequency = 0 Hz
7	0 = No controller inhibit 1 = Controller inhibit
8	Controller status 0 = no fault 8 = fault present
9	
10	
11	
12	0 = No overtemperature warning 1 = Overtemperature warning
13	0 = No DC bus overvoltage 1 = DC bus overvoltage
14	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
15	0 = Not ready 1 = Ready (no faults)
WORD1	<ul style="list-style-type: none"> <li>Signed output frequency read from C50</li> <li>Scaling = C50 x 50</li> <li>Example 1: CW at 34.5 Hz = 34.5 x 50 = 1725 = 0x06BD</li> <li>Example 2: CCW at 44.5 Hz = - (44.5 x 50) = - 2225 = 0xF74F</li> </ul>
WORD2	reserved
WORD3	reserved

Bit	h86 / h96 setting = 1
0	reserved
1	0 = Pulses to power stage enabled 1 = Pulses to power stage Inhibited
2	0 = Current limit not reached 1 = Current limit reached
3	reserved
4	0 = Actual frequency < > setpoint 1 = Actual frequency = setpoint
5	0 = Not above threshold (C17) 1 = Above threshold (C17)
6	0 = Actual frequency < > 0 Hz 1 = Actual frequency = 0 Hz
7	0 = No controller inhibit 1 = Controller inhibit
8	Controller status 0 = no fault 8 = fault present
9	
10	
11	
12	0 = No overtemperature warning 1 = Overtemperature warning
13	0 = No DC bus overvoltage 1 = DC bus overvoltage
14	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
15	0 = Not ready 1 = Ready (no faults)
WORD1	<ul style="list-style-type: none"> <li>Unsigned output frequency read from C50</li> <li>Scaling = C50 x 10</li> <li>Example: CW at 34.5 Hz = 34.5 x 10 = 345 = 0x0159</li> <li>Direction is indicated by bit 14 in WORD0</li> </ul>



# Commissioning

WORD0 - Controller status in C0135 format	Bit	h86 / h96 setting = 2	
	0	JOG1, JOG2, JOG3	0 = C46 active
		1	1 = JOG1 (C37) active
		2	2 = JOG2 (C38) active
	1	3	3 = JOG3 (C39) active
		Direction of rotation	0 = CW (forward)
	2	1	1 = CCW (reverse)
		Quick stop	0 = Quick stop not active
	3	1	1 = Quick stop active
		4	reserved
	5	reserved	
	6	reserved	
	7	reserved	
	8	reserved	
	9	Controller inhibit	0 = No controller inhibit
		1	1 = Controller inhibit
10	reserved		
11	TRIP reset	0 = No TRIP reset	
	1	1 = TRIP reset	
12	reserved		
13	reserved		
14	DC brake	0 = DC brake not active	
	1	1 = DC brake active	
15	reserved		
WORD1		<ul style="list-style-type: none"> <li>Signed frequency setpoint [Hz]</li> <li>Scaling = frequency setpoint [Hz] x 50</li> <li>Example 1: CW at 34.5 Hz = <math>34.5 \times 50 = 1725 = 0x06BD</math></li> <li>Example 2: CCW at 44.5 Hz = <math>-(44.5 \times 50) = -2225 = 0xF74F</math></li> </ul>	
WORD2	reserved		
WORD3	reserved		

WORD0 - Controller status in C0135 format	Bit	h86 / h96 setting = 3	
	0	JOG1, JOG2, JOG3	0 = C46 active
		1	1 = JOG1 (C37) active
		2	2 = JOG2 (C38) active
	1	3	3 = JOG3 (C39) active
		Direction of rotation	0 = CW (forward)
	2	1	1 = CCW (reverse)
		Quick stop	0 = Quick stop not active
	3	1	1 = Quick stop active
		4	reserved
	5	reserved	
	6	reserved	
	7	reserved	
	8	reserved	
	9	Controller inhibit	0 = No controller inhibit
		1	1 = Controller inhibit
10	reserved		
11	TRIP reset	0 = No TRIP reset	
	1	1 = TRIP reset	
12	reserved		
13	reserved		
14	DC brake	0 = DC brake not active	
	1	1 = DC brake active	
15	reserved		
WORD1		<ul style="list-style-type: none"> <li>Unsigned frequency setpoint [Hz]</li> <li>Scaling = frequency setpoint [Hz] x 10</li> <li>Example: CW at 34.5 Hz = <math>34.5 \times 10 = 345 = 0x0159</math></li> <li>Direction is indicated by bit 2 in WORD0</li> </ul>	



Bit	h86 / h96 setting = 4
0	0 = Not ready to switch on 1 = Ready to switch on
1	0 = Not switched on 1 = Switched on
2	0 = operation disabled 1 = operation enabled
3	0 = No fault 1 = Fault
4	0 = Voltage disabled 1 = Voltage enabled <b>Note:</b> On smd controller, this is always enabled
5	0 = Quick stop active 1 = Quick stop not active
6	Switch on disabled On smd controller this is always 0 (switch on enabled)
7	0 = No warning 1 = Warning
8	Manufacturer specific
9	Remote 0 = C01 < 2 and 3 1 = C01 = 2 or 3
10	Target reached 0 = Setpoint not reached 1 = Setpoint reached
11	Internal limit 0 = Internal limit not active 1 = Internal limit active
12	reserved
13	reserved
14	reserved
15	reserved

WORD0 - Statusword 0x6041

Bit	h86 / h96 setting = 5
0	0 = Not ready to switch on 1 = Ready to switch on
1	0 = Not switched on 1 = Switched on
2	0 = operation disabled 1 = operation enabled
3	0 = No fault 1 = Fault
4	0 = Voltage disabled 1 = Voltage enabled <b>Note:</b> On smd controller, this is always enabled
5	0 = Quick stop active 1 = Quick stop not active
6	Switch on disabled On smd controller this is always 0 (switch on enabled)
7	0 = No warning 1 = Warning
8	Manufacturer specific
9	Remote 0 = C01 < 2 and 3 1 = C01 = 2 or 3
10	Target reached 0 = Setpoint not reached 1 = Setpoint reached
11	Internal limit 0 = Internal limit not active 1 = Internal limit active
12	reserved
13	reserved
14	reserved
15	reserved

WORD0- Statusword 0x6041

WORD1

- Signed output frequency read from C50
- RPM is calculated based on C50, C87, and C89
- Example 1 (C87 = 1390 RPM, C89 = 50 Hz):  
CW at 25.0 Hz =  $25.0 \times 1390/50 = 695 = 0x02B7$
- Example 2 (C87 = 1390 RPM, C89 = 50 Hz):  
CCW at 44.5 Hz =  $-(44.5 \times 1390/50) = -1237 = 0xFB2B$



# Commissioning

	Bit	h86 / h96 setting = 6
WORD0 - C0150 Status word	0	reserved
	1	0 = Pulses to power stage enabled 1 = Pulses to power stage Inhibited
	2	0 = Current limit not reached 1 = Current limit reached
	3	reserved
	4	0 = Actual frequency < > setpoint 1 = Actual frequency = setpoint
	5	0 = Not above threshold 1 = Above threshold (C17)
	6	0 = Actual frequency < > 0 Hz 1 = Actual frequency = 0 Hz
	7	0 = No controller inhibit 1 = Controller inhibit
	8	
	9	Controller status
	10	0 = no fault 8 = fault present
	11	
	12	0 = No overtemperature warning 1 = Overtemperature warning
	13	0 = No DC bus overvoltage 1 = DC bus overvoltage
	14	Direction of rotation 0 = CW (forward) 1 = CCW (reverse)
15	0 = Not ready 1 = Ready (no faults)	
WORD1		<ul style="list-style-type: none"> <li>Signed output frequency read from C50 signed scaled +/- 16384 = C11 (max frequency)</li> <li>Scaling = <math>C50 \cdot 16384 / C11</math></li> <li><b>Example 1:</b> WORD1 = 0x2C29, C11 = 50.0Hz Direction = Sign(0x2C29) = CW Frequency = <math>ABS(0x2C29) \cdot C11 / 16384</math> = <math>11305 \cdot 50 / 16384 = 34.5 \text{ Hz CW}</math></li> <li><b>Example 2:</b> WORD1 = 0xC70A, C11 = 50.0Hz Direction = Sign(0xC70A) = CCW Frequency = <math>ABS(0xC70A) \cdot C11 / 16384</math> = <math>14582 \cdot 50 / 16384 = 44.5 \text{ Hz CCW}</math></li> </ul>
WORD2		Digital inputs status (TB28,E1,E2,E3) <ul style="list-style-type: none"> <li>Bit 0 - TB28 state (1 - asserted)</li> <li>Bit 1 - E1 state (1 - asserted)</li> <li>Bit 2 - E2 state (1 - asserted)</li> <li>Bit 3 - E3 state (1 - asserted)</li> </ul>
WORD3		Analog input value 0-1000 -- corresponds to 0-10V ex. 400 -> 4.00V



## 4.5 Quick CAN Set-up

1. Power up the controller and set h50 (CAN address) and h51 (CAN baud rate) to appropriate values.
2. Power down the controller and connect the communication cable. For reliable communication make sure terminal CAN\_GND is connected to CAN network GND/common. If only two wires are used (CAN\_H and CAN\_L) in the network, connect CAN\_GND to chassis/earth ground.
3. Power up the controller.
4. Use Global Drive Control Software to configure the required operation of the controller.

**Example:** Controller #2 needs to follow the operation of controller #1 (start/stop, speed, etc). Controller #1 can be controlled by CANopen or traditional control elements (relays, etc).

Controller #1 configuration		
No.	Name	Setting
<b>h50</b>	CAN address (Node ID)	1
<b>h51</b>	CAN baud rate	5 500 kbps
<b>h52</b>	System bus participant	1 Slave with autostart enabled
<b>h53</b>	Parameter channel 2 (SDO#2)	0 Enable with default COB ID
<b>h84</b>	TPDO#1 event timer	10 ms
<b>h86</b>	TPDO#1 mapping	3 Controller status in C0135 format + frequency setpoint unsigned

Controller #2 configuration		
No.	Name	Setting
<b>C01</b>	Setpoint source	3 CANopen control
<b>h45</b>	Error behavior	1 No state change
<b>h50</b>	CAN address (Node ID)	2
<b>h51</b>	CAN baud rate	5 500 kbps
<b>h52</b>	System bus participant	1 Slave with autostart enabled
<b>h53</b>	Parameter channel 2 (SDO#2)	1 Enable with prog. COB ID
<b>h60</b>	RPDO#1 COB ID	385 (h80 from controller #1)
<b>h64</b>	RPDO#1 event monitoring timer	50 ms
<b>h65</b>	RPDO#1 time out reaction	1 Inhibit
<b>h66</b>	RPDO#1 mapping	1 C0135 control word + C46 frequency setpoint unsigned

After setting the parameters, perform Node reset using parameter h58 or cycle the power.

After these controllers are configured as above, controller #2 will follow the operation of controller #1 including: Inhibit state, Quick Stop, DC brake, JOG speed selections, direction, and speed. For additional safety, controller #2 will transition to inhibit state if valid PDO is not received from controller #1 within 50ms.



## 5 Troubleshooting and Fault Elimination

Status	Cause	Remedy	
e.g. <b>SD0</b>	Present output frequency	Trouble free operation	
<b>OFF</b>	Stop (outputs U, V, W inhibited)	LOW signal at terminal 28	Set terminal 28 to HIGH
<b>Inh</b>	Inhibit (outputs U, V, W inhibited)	Controller is set up for CANopen operation (see C01)	Start the controller via CANopen
<b>StP</b>	Output frequency = 0 Hz (outputs U, V, W inhibited)	Setpoint = 0 Hz (C31 = 0)	Setpoint selection
		Quick stop activated through digital input	Deactivate Quick stop
<b>br</b>	DC-injection brake active	DC-injection brake activated <ul style="list-style-type: none"> <li>via digital input</li> <li>automatically</li> </ul>	Deactivate DC-injection brake <ul style="list-style-type: none"> <li>digital input = LOW</li> <li>automatically after holding time c06 has expired</li> </ul>
<b>CL</b>	Current limit reached	Controllable overload	Automatically (see C22)
<b>LU</b>	Undervoltage on DC bus	Mains voltage too low	Check mains voltage
<b>dEC</b>	Overvoltage on DC bus during deceleration (warning)	Excessively short deceleration time (C13)	Automatically if overvoltage < 1 s, <b>DU</b> , if overvoltage > 1 s
<b>nEd</b>	No access to code	Can only be changed when the controller is in <b>OFF</b> or <b>Inh</b>	Set terminal 28 to LOW or inhibit through CANopen

Error	Cause	Remedy <sup>(1)</sup>	
<b>cF</b>	Data not valid for controller	<ul style="list-style-type: none"> <li>Use EPM providing valid data</li> <li>Load Lenze setting</li> </ul>	
<b>CF</b>	Data on EPM not valid		
<b>GF</b>	OEM data not valid		
<b>F I</b>	EPM error	EPM missing or defective	Power down and replace EPM
<b>CFG</b>	Digital inputs not uniquely assigned	E1...E3 assigned with the same digital signals	Each digital signal can only be used once
		Either just "UP" or "DOWN" used	Assign the missing digital signal to a second terminal
<b>dF</b>	Dynamic braking fault	Dynamic braking resistors are overheating	Increase deceleration time (C13)
<b>EEr</b>	External error	Digital input "TRIP set" is active	Remove external error
<b>F2...FD, JF</b>	Internal fault		Please contact Lenze
<b>FC3</b>	CAN communication timeout	Monitored CAN messages not received	<ul style="list-style-type: none"> <li>Check h48 for cause</li> <li>Increase timeout settings</li> <li>Check CAN wiring</li> </ul>
<b>FC5</b>	CAN initialization failed	CAN controller failure	<ul style="list-style-type: none"> <li>Perform CAN reset (h58)</li> <li>Cycle power</li> </ul>
<b>LC</b>	Automatic start inhibited	c42 = 0	LOW-HIGH signal change at terminal 28

(1) The drive can only be restarted if the error message has been reset; see c70



	Error	Cause	Remedy <sup>(1)</sup>
<b>OC 1</b>	Short-circuit or overload	Short-circuit	Find reason for short-circuit; check motor cable
		Excessive capacitive charging current of the motor cable	Use shorter motor cables with lower charging current
		Acceleration time (C12) too short	<ul style="list-style-type: none"> <li>• Increase acceleration time</li> <li>• Check controller selection</li> </ul>
		Defective motor cable	Check wiring
		Internal fault in motor	Check motor
		Frequent and long overload	Check controller selection
<b>OC2</b>	Earth fault	Grounded motor phase	Check motor/motor cable
		Excessive capacitive charging current of the motor cable	Use shorter motor cables with lower charging current
<b>OC6</b>	Motor overload (I <sup>2</sup> t overload)	Motor is thermally overloaded, due to: <ul style="list-style-type: none"> <li>• impermissible continuous current</li> <li>• frequent or too long acceleration processes</li> </ul>	<ul style="list-style-type: none"> <li>• Check controller selection</li> <li>• Check setting of c20</li> </ul>
<b>OH</b>	Controller overtemperature	Controller too hot inside	<ul style="list-style-type: none"> <li>• Reduce controller load</li> <li>• Improve cooling</li> </ul>
<b>OU</b>	Overvoltage on DC bus	Mains voltage too high	Check mains voltage
		Excessively short deceleration time or motor in generator mode	Increase deceleration time or use dynamic braking option
		Earth leakage on the motor side	Check motor/motor cable (separate motor from controller)
<b>rSt</b>	Faulty auto-TRIP reset	More than 8 errors in 10 minutes	Depends on the error
<b>SF</b>	Single phase fault	A mains phase has been lost	Check mains voltage

(1) The drive can only be restarted if the error message has been reset; see c70







## NOTE

In the event of an "OC6" (Motor Overload) failure there is a 3-minute delay before resetting is possible. This is a requirement of UL508C. This delay is intended to allow time for the motor to cool.

If power is removed when the drive is in an "OC6" fault state, when the power is restored the "OC6" fault will still be present and the delay will still be active even if power was removed for longer than 3 minutes.



Lenze Americas Corporation  
630 Douglas Street  
Uxbridge, MA 01569  
USA

 800 217-9100  
 508 278-7873  
 [marketing@lenzeamericas.com](mailto:marketing@lenzeamericas.com)  
 [www.Lenze.com](http://www.Lenze.com)

#### Service

Lenze AC Tech Corporation  
630 Douglas Street  
Uxbridge, MA 01569  
USA

 508 278-9100  
 508 278-6620  
 [repair@lenzeamericas.com](mailto:repair@lenzeamericas.com)